KomfiTilt Edition-3 New Features User Guide



Normal ON/OFF function will activate Left-Supine-Right (A-B) function of the cells



MANUAL LOCK-OFF OF LEFT OR RIGHT CELL

To Lock-Off either the Right or Left cell, so that it doen't inflate during the operational cycle:

On Start-Up, switch the power ON and the faceplate lights will light up. **Cell A only**

Press the 'Reset Alarm' button and hold down

The 'Normal' green light will flash and the audible alarm will sound Release the 'Reset Alarm' button and the KomfiTilt will function inflating cell A only

Cell B only

Press the 'Reset Alarm' button again and hold down The 'Low' red light will flash and the audible alarm will soun Release the 'Reset Alarm' button and the KomfiTilt will function inflating cell B only

Cell A & B in normal rotation

Press the 'Reset Alarm' button again and hold down

The 'Power' green light will flash and the audible alarm will sound

Release the 'Reset Alarm' button and the KomfiTilt will function inflating cell A & B in the normal rotation



KomfiTilt Edition-3 New Features User Guide

KomfiTilt APP now available for iOS and Android Image: State of the pownload on the pownload

Download and connect to your KomfiTilt via Bluetooth

Input Model No: (e.g. SQ-BT1955) this model number can be found on the pump box

When connected a tracking record will shown on the graph (the two colours represent the different cells)

Cycle Time adjustment

Press the 'Clock' icon and an audible alarm will sound and the green light will move to the next setting (cycle time can be adjusted between 10 / 15 / 20 / 25 minutes)

Cell Lock-Off

Press the 'Cell Tilt' icon and an audible alarm will sound and the green light will move to the next setting (B / A & B / A)

History Records

Press the 'History Records' and select from the list to show the stored record

